



Permeable Ground Reinforcement

Maintenance

ECORASTER® Bloxx | E Series

ECORASTER® E Series and Bloxx Maintenance Guidelines

Ecoraster® products are designed to be maintenance-free.

- » For ECORASTER® gravel-filled applications, the surface should be inspected from time to time to identify signs of slight cell infill loss. The pavement should be monitored to ensure traffic frequency and loading does not exceed the pavement design.
- » For ECORASTER® grass-filled applications, maintenance is limited to the grass element of the system. Irrigation, fertilizing, cutting etc. should be done according to the grass type and climate.
- » For ECORASTER® Bloxx systems, no special maintenance or vacuuming is required. Leaves and other organic materials or garbage can be raked, swept or blown. Care should be taken not to remove the gravel, grass, or Bloxx inserts.
- » ECORASTER® Bloxx inserts can be carefully removed and replaced if they are damaged or stained.

ECORASTER® E Series and Bloxx Snow Removal Guidelines

To ensure that the ECORASTER® products are not damaged, remove snow using one of the following methods:

- » Use a plow blade with a flexible rubber edge or spacer pucks.
- » Use a plow blade with skids on the lower outside corners so the plow blade does not come in contact with the ECORASTER® units.

